ARAT Navigation mount

Type: ROVER
Range Rover

Part No: NS1238

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

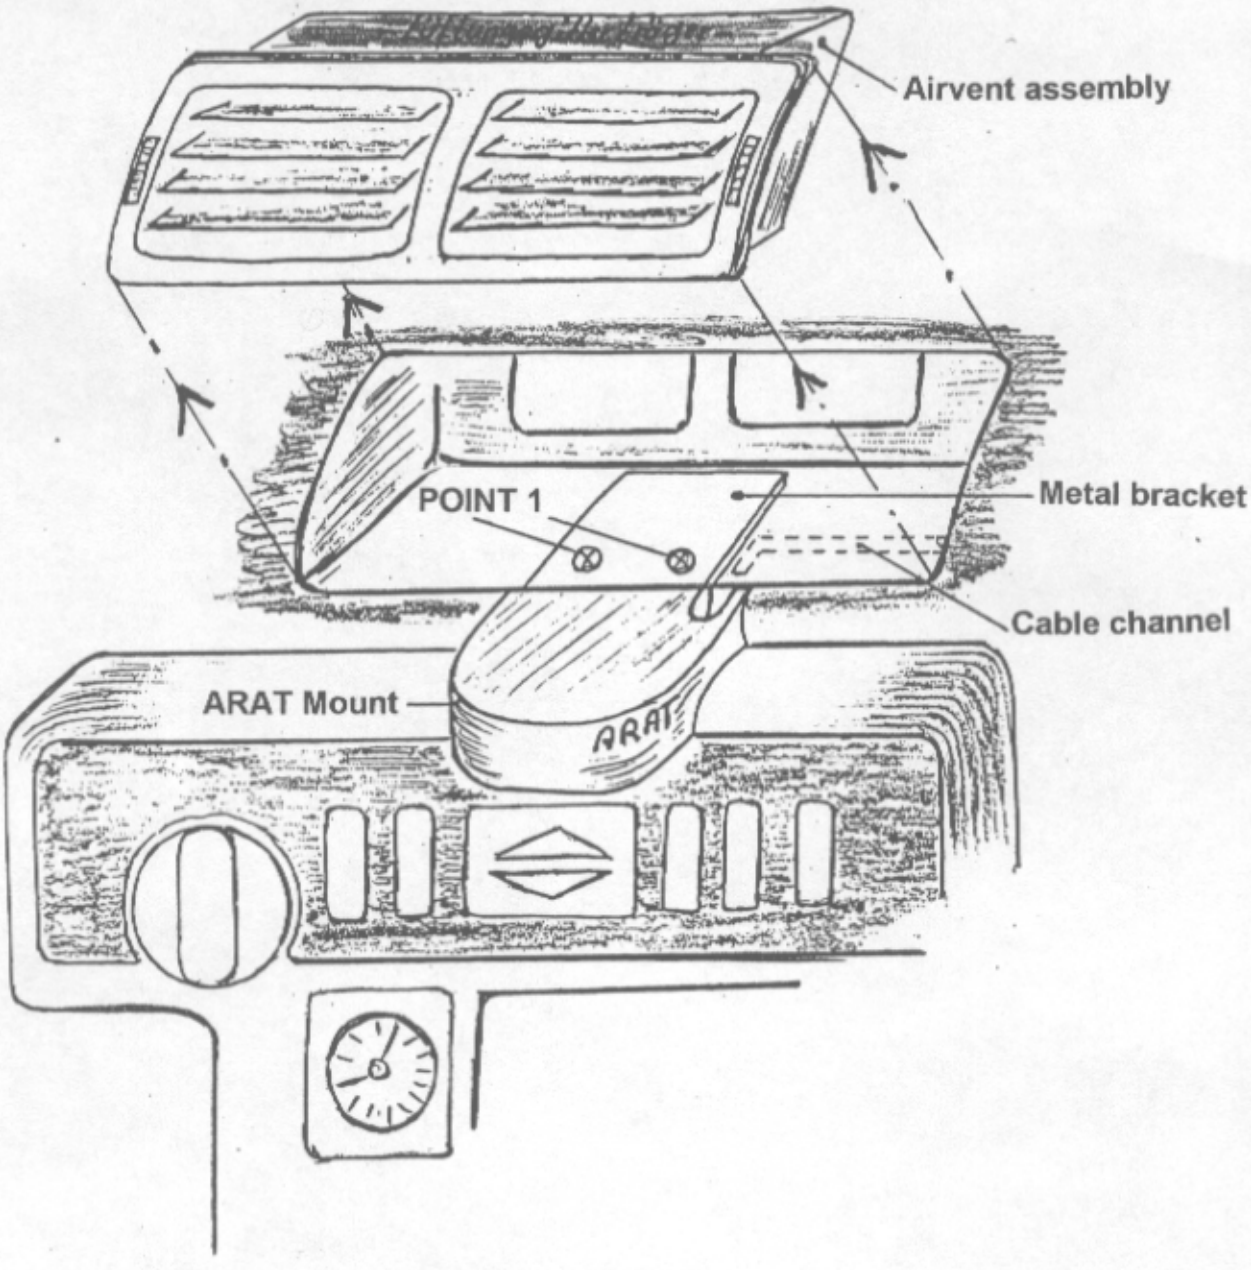

Installation instruction

1. Remove the airvent assembly, (it is only a clip fit)
2. Place the ARAT mount to the contours of the dashboard, and secure the mount through the top metal bracket with the supplied screws, (pre-drill Ø 2mm)
3. If neccessary cut a channel beneath the airvent as in the picture
4. Replace the airvent assembly